

# Read the instructions!

# Fits '03 and Up FLSTC & FLSTS Part # CV138/CV139

All of our parts are designed for custom use.

Installation of your BareBacks® is simple.


A qualified technician should perform installation.

**Contents:** Four (4) BareBacks® attachments (4 Male & 4 Female), Two (2) hairpin locks, Two (2) isolator bumpers, Four (4) springs, Four (4) collars.


**Step 1:** Remove your Heritage Saddlebag by opening the saddlebag and removing the two 3/8 bolts and the 5/16 acorn nut (by the foot peg) that held it in place.

**Step 2:** Remove the rubber isolator and pin. NOTE: If using a detachable sissy bar, add new isolator and pin to existing isolator. Use Locktite!

**Step 3:** Replace your fender strut thru-bolts with the male BareBacks®. When using docking hardware for detachable sissy bar some applications may require an additional spacer. Be sure to check all clearance between tire and strut fasteners. (If they come into contact with the tire, shorten the strut bolt. The strut male BareBacks® only come in one length). Use Locktite!



**Step 4:** Holding the saddlebag, now install the Female BareBacks®. The front and rear of the female BareBacks® are to be positioned at a 90° angle facing down. To hold the Female BareBacks® while tightening, use an 11/16" wrench. Use locktite! If you do not position it as stated, the system will fail. NOTE: Do not over tighten – torque to 30 lbs.

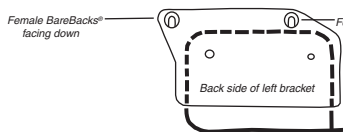

**Step 5:** Rear BareBacks® first, front BareBacks® second, bumper last. Secure bumper with stud and hairpin. Option: For added security, you may elect NOT to secure your saddlebag with the removable hairpin. You can attach your saddlebag more securely by fastening it to the isolator bumper with a 5/16 bolt.

**Step 6:** Repeat on the other side.

**Important:**

1. Use locktite on everything.
2. Since BareBacks® are made out of 303 stainless steel, you can polish the male side. DO NOT chrome them. It will chip the chrome.

### Our Warranty Policy

Cycle Visions' obligation under "Our Warranty Policy" is limited to one(1) year from date of purchase to repair or replacement of the defective item(s). Chrome, polished, powder-coated, anodized finishes, or electrical parts are limited to thirty (30) days from date of purchase.

This warranty will be void on all products that show evidence of misapplication, improper installation, abuse, lack of proper maintenance, negligence, or alteration from their original design.

The consumer will be responsible for removing from the vehicle any defective item(s), transportation costs prepaid and for reinstallation upon return by Cycle Visions. The loss of use of the product, loss of time, inconvenience, commercial loss or consequential damages is not covered. Cycle Visions reserves the right to change the design of any product without assuming any obligation to modify any product previously manufactured. Warranty returns of Cycle Visions products are few because of our high quality products.

Carefully inspect all parts.... If you find that your parts arrived in damaged condition, all original packaging material (box and other materials) must be saved to make a proper damage claim. You must be able to present the damaged boxes and materials to the freight carrier to verify your claim. The user shall assume all legal, personal, injury risk and liability and all other obligations, duties and risks associated therewith.



San Diego, CA • (619) 295-7800

[www.cyclevisions.com](http://www.cyclevisions.com)

See our other products on the web!

Made in the USA

Patent US 6,293,450-B1